

## How to Install Stock Metal Blinds


Before you begin your installation:

### READ ALL INSTALLATION INSTRUCTIONS!

**IMPORTANT:** If bound, do not remove binding until the blinds are installed in the window.

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and blinds for proper width and length. If you are installing several sets of blinds, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

### PARTS LIST

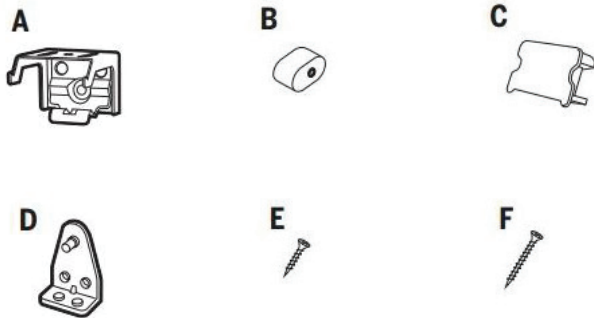


Width	Up to 37 in.	37 in. to 72 in.
A. Mounting Bracket	2	3
B. Bottomrail Endcap	2	2
C. Headrail Endcap	2	2
D. Hold-down Bracket	2	2
E. #5 Screw x 3/4 in.	4	4
F. #6 Screw x 1-1/4 in.	5	7

### TOOLS YOU MAY NEED (NOT INCLUDED):

- Tape Measure
- Pencil
- Flat-blade or Philips Head Screwdriver
- Drill with 1/16" Bit


## 2. UNPACKING THE PARTS

Remove these parts packed in the headrail. Quantity varies with blind size.

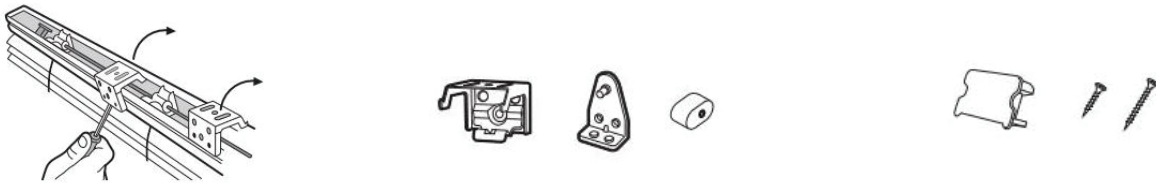


## 3. BRACKET PLACEMENT


Pre-drill wood frame if necessary

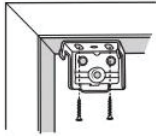

Inside Mount


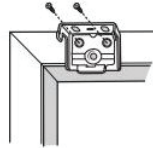


Outside Mount



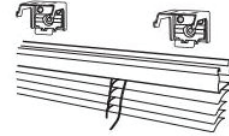


## 4. ENDCAPS AND WAND

Snap together where applicable.

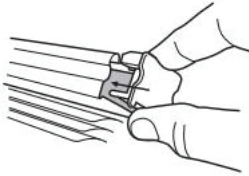


## 5. FINISHING UP

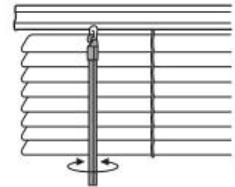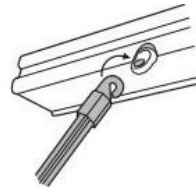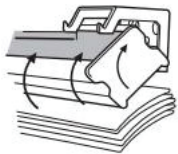


Tilt slats downward for maximum closure.

**IF APPLICABLE:** Hold-down brackets

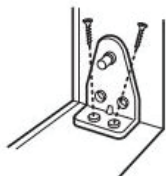

Inside Mount

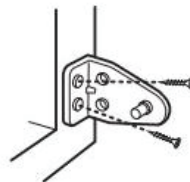

Outside Mount

