


How to Install Stock Vertical Blind Vanes

1. VANE ATTACHMENT

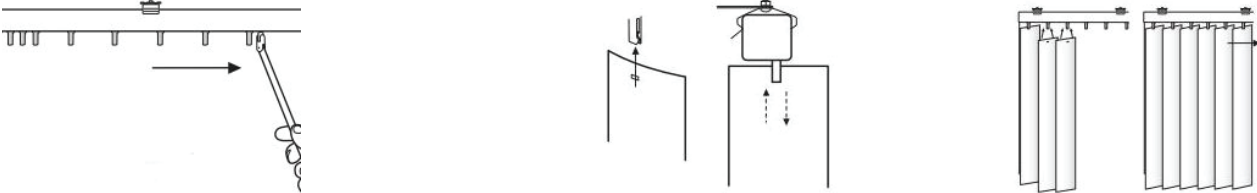

Spread vane clips evenly across the headrail.

2. VANE REMOVAL

