


How to Install Stock Cordless Faux, Faux and Real Wood

Before you begin your installation:

READ ALL INSTALLATION INSTRUCTIONS!

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and blinds for proper width and length. If you are installing several sets of blinds, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

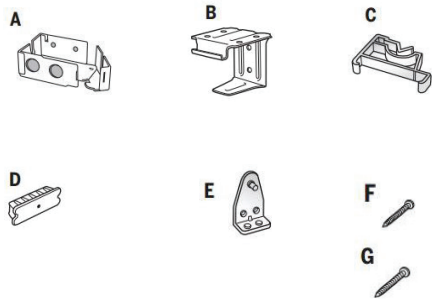

Width	Up to 37 in.	37 in. to 47 in.	Greater than 47 in.
A. Box Bracket (Left and Right)	2	2	2
B. Support Bracket	0	1	1
C. Valance Clip	2	2	3
D. Bottomrail Endcap*	2	2	2
E. Hold-down Bracket**	2	2	2
F. #5 Screw x 3/4 in.**	4	4	4
G. #6 Screw x 1 1/4 in.	5	7	7

1. TOOLS YOU MAY NEED (NOT INCLUDED):

- Tape Measure
- Pencil
- Flat-blade or Philips Head Screwdriver
- Drill with Bits

2. UNPACKING THE PARTS


Remove these parts packed in the headrail. Quantity varies with blind size.



3. BRACKET PLACEMENT





Left Bracket / Right Bracket

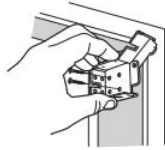




Outside Mount



Inside Mount





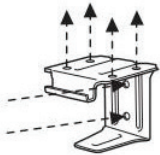


4. VALANCE CLIPS & WAND

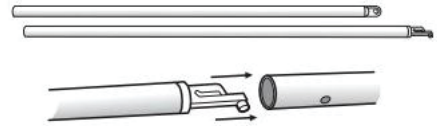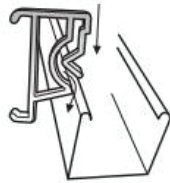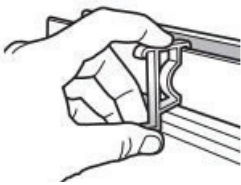

Snap together where applicable.

5. FINISHING UP

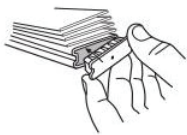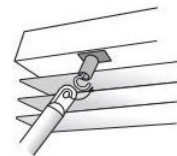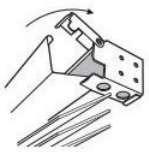

IF APPLICABLE: Hold-down Brackets

