LEVOLOR

How to Install Stock Vertical Blinds

Before you begin your installation:

READ ALL INSTALLATION INSTRUCTIONS!

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and blinds for proper width and length. If you are installing several sets of blinds, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

PARTS LIST
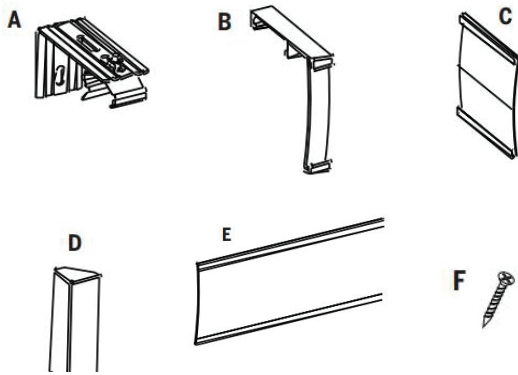
Width	Up to 48 in.	48 in. to 78 in.	Greater than 78 in.
A. Mounting Bracket	2	3	4
B. Valance clip	2	3	4
C. Groover valance return	2	2	2
D. Valance corner	2	2	2
E. Groover valance	1	1	1
F. #6 Screw × 1 1/4 in.	4	6	8

1. TOOLS YOU MAY NEED (NOT INCLUDED):

- Tape Measure
- Pencil
- Flat-blade or Philips Head Screwdriver
- Drill with Bits

2. BRACKET PLACEMENT

Outside Mount   Inside Mount   Ceiling Mount
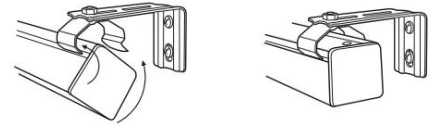
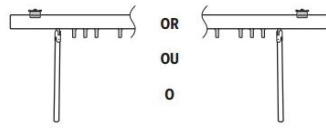Min. 2.25 in. 5,7 cm

3 in. 7,6 cm
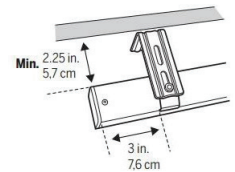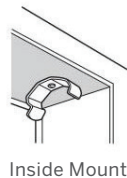
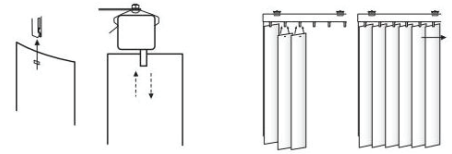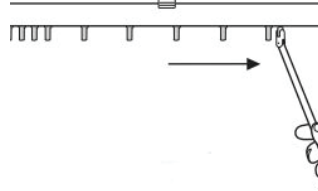### 3. HEADRAIL PREPARATION

Where applicable.
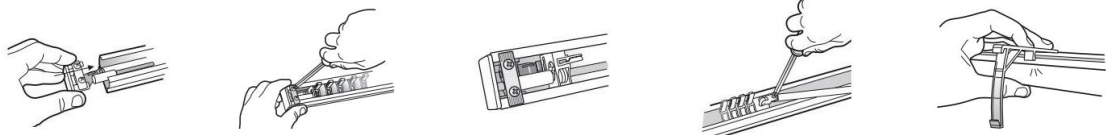
4. HEADRAIL ATTACHMENT

Left to right opening recommended for S-Curve vanes.

5. VANE ATTACHMENT

Spread vane clips evenly across the headrail.

6. VALANCE ATTACHMENT

7. VANE REMOVAL